

## **Score board instructions**

Score board controllers are located in the NW high school gym storage room. There are two in hard cases.

- Plug in.
- Power ON scoreboard (breaker box behind pads in SW corner of gym)
- Turn the controller(s) on.
- Resume game? NO (starting a NEW game)
- Enter Code 1101

TO CONTROL BOTH SCOREBOARDS FROM 1 CONTROLLER (single game on main floor)

- Broadcast group 0 on both control boards
- Radio Channel 0 on one control board

TO CONTROL EACH SCOREBOARD SEPARATELY

- Broadcast group 1 on both control boards
  - Radio Channel 1 on one control board
  - Radio Channel 2 on the other control board
- 
- Wait about 15 sec for scoreboards to turn on.