

Flag Football – Field 3 - Scoreboard Instructions

Edge SS-5000 Scoreboard

ON/OFF switch is on side of scoreboard, Remote control is stored in bag, clipped to back of scoreboard.

SETTING TIME

SET TIME TO 20:00 MINUTES

Press SET button once to activate set mode – Do NOT hold down the Set button or you will enter the Settings menu.

Use the up and down arrows (either Home or Guest) to change the tens of minutes digit. Press SET when complete and the ones of minutes digit will flash, keep pressing SET until all digits stop flashing.

STARTING/STOPPING TIMER

To start/stop the timer, Press:



NOTE: If the time is going up rather than down, then you need to change the mode of the timer
Press and hold the SET key for a few seconds to enter the SETTINGS Menu. Set Menu A to 00 to set timer to count down. NOTE: The mode can only be changed when the timer is not running.

TEAM SCORES

Home and Guest Scores can be changed using the Home and Guest Up and Down Arrows Keys.


HORN

The horn will blow continuously while HORN button is pressed.

The horn will blow automatically at the end of each period.

PERIOD

Press

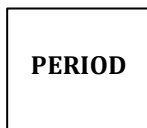

once to increment to the next period.

AFTER LAST GAME: Turn power OFF, place remote control in storage bag and clip to back of scoreboard. Return scoreboard & stand to storage room.